


# HOW TO LOAD YOUR CARAVAN CORRECTLY.

- Light weight items
- Medium weight items
- Heavy weight items

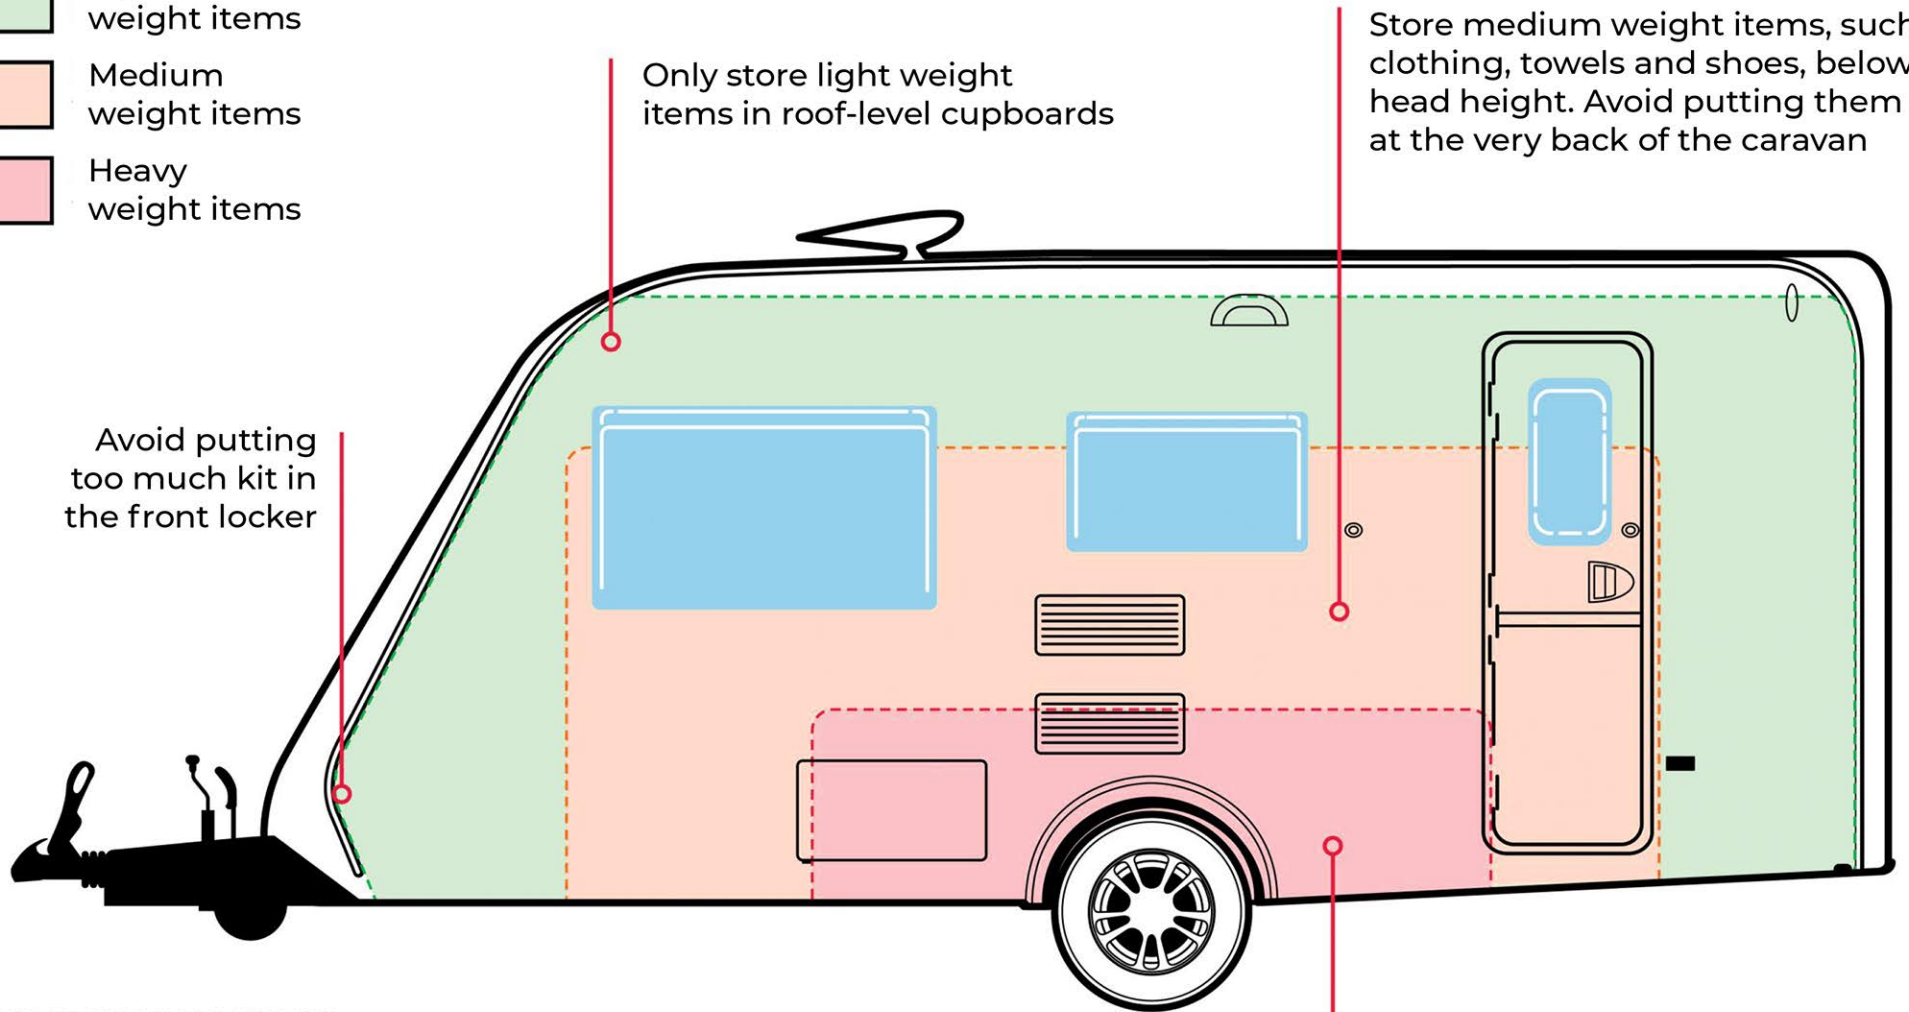

Only store light weight items in roof-level cupboards

Store medium weight items, such as clothing, towels and shoes, below head height. Avoid putting them at the very back of the caravan

Avoid putting too much kit in the front locker

Store heavy items such as awnings, TVs and boxes of wine low down and as close to the axle as possible